




CONTENT STARTER-SET

- 14 LED Candles - Serial-Nr.: 12203
- 14 high-quality alkaline AAA batteries
- 1 IR remote control - Serial-Nr.: 10401
- 2 high-quality alkaline AAA batteries

Item Nr.: 75322

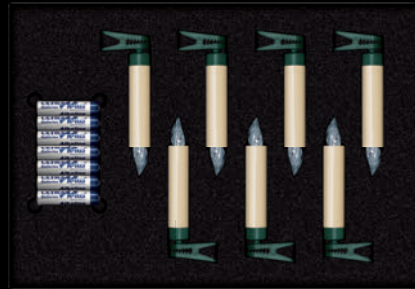

CONTENT EXTENSION SET

- 7 LED Candles - Serial-Nr.: 12203
 - 7 high-quality alkaline AAA batteries
- without remote control

Item Nr.: 75332

TECHNICAL DATA


- Version IR 1.2 with Infrared technology
- Candles will burn for 14 days when used approx. 4 hrs/day with fresh batteries
- Weight of each candle including battery: approx. 20 g
- Length of candle including clip: approx. 9 cm
- Candle diameter: approx. 1.5 cm
- Range of the remote control depends on the site conditions and the battery strength
- Candle batteries: Micro type LR03 / AAA – 1,5V ===
- Remote control batteries: Micro type LR03 / AAA – 1,5 V ===
- LED: risk group 0
- Protection class: III ⚡
- LED performance: 7 mW

EU Conformity Declaration


Hereby KRINNER GmbH confirms, that this product satisfies the EMC Directive 2004/108/EG. A copy of the conformity declaration can be found at the following internet address:
www.krinner.com/service/konformitaet



STARTER- AND EXTENSION SET USER INSTRUCTIONS CLASSIC MINI

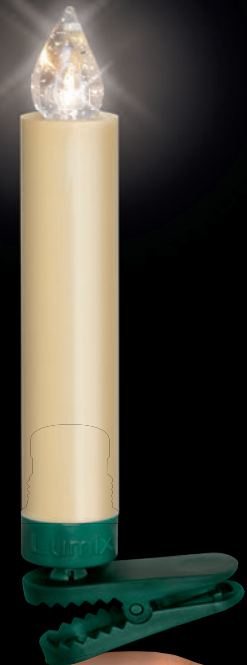

Safety

- Lumix is for indoor use only!
- The existing LEDs cannot be changed!
- Use only high-quality alkaline batteries of the same type AAA for the candles and the remote control!
- Do not throw away batteries. Recycle them! 
- Do not recharge or short-circuit the batteries!
- Do not throw batteries into water or fire!
- Make sure to mount the batteries correctly by inserting the positive pole first!
- For storage remove all batteries!
- Lumix is not a toy. Supervise your children at all times while using these wireless Christmas candles!
- Make sure to clip the candles securely to the branches so they cannot fall off!
- Altering the product in any way will void your warranty!
- Keep your tree away from fireplaces, heaters and all other open flames!

IMPORTANT NOTICE

Please insert the batteries just before the candles are actually used. The candles will use energy in standby mode (switched off).

The remote control sends its signal as long as you press each switch. If candles have not responded, continue to press the respective on/off switch and, if necessary, point the remote control in the direction of the candles.


The candles are equipped with a battery change signal: once the remaining battery energy is no longer sufficient to switch on/off the candle, the LED begins to flash. Please renew the batteries in the flashing candles.

If one or more extension sets are used you do not need an additional remote control. The starter set remote will operate as many candles as desired.





Clean the set with a lightly dampened cloth only. Do not use strong cleaners.

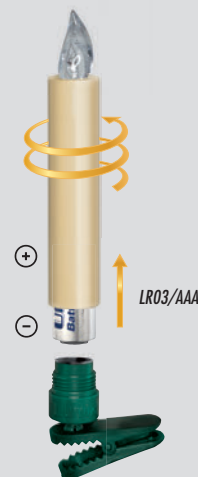Using the candles


1. Hold the green clip (bottom) firmly
– Open the candle body by twisting counter clockwise.
2. Insert AAA battery into the opened candle
– (Ensure correct polarity!)
3. To close the candle put the green clip into the open end and turn clockwise.
4. The candle will begin to light
– act with all candles of the set.



Using the remote control (comes with Starter-Set only)

5. Open battery compartment on the bottom side of the remote control
6. Put in 2 AAA batteries (ensure correct polarity!), close battery compartment.
7. Select the channel 
Select the channel (A, B or C), with which you want to operate the candles.
8. OFF Switch 
Press the OFF switch at the remote control until all candles have been switched off. The red flashing LED indicates the function of the remote control.
9. ON Switch 
Press the ON switch on the remote control while all candles have been switched on. The red flashing LED indicates the function of the remote control.
10. Flicker-mode activation  x2
To use the flicker mode, double-click the ON switch "I" (two times in quick succession). To get back to the continuous light, press the ON switch "I" once.



 If you should want to reset your candles reopen the battery compartment of each candle. Afterwards you can choose another channel for your candles as described above.

TROUBLESHOOTING

A All or some candles do not react to your remote control:

- Check batteries for correct mounting in remote control and candles.
- All candles must be lit when equipped with battery.
- Does the red LED on remote control flash when pushing a switch? If not, please check batteries inside.
- To switch ON/OFF each candle, it may be necessary to point the remote control in the direction of the candles as Lumix uses infrared technology.

B Some candles start to flash ON/OFF for 2 seconds:

- The battery power inside the candles is too low. Please change the battery.
- Please mount batteries just before you decorate your tree. The candles will use energy in stand-by mode.

C During operation, some or all candles are no longer responding to the remote control:

- Press Power On or Off button continuously until candles respond.
- Is the distance between the remote control and candles too far? With decreasing power of the batteries in the candles, the distance between remote control and candles must be shortened.
- Based on local circumstances, it may be necessary to move the remote control towards the unresponsive candle.
- Reset nonresponsive candles if necessary. The affected candle must be opened and closed again (The battery contact must be interrupted). Press the OFF/ON switch again to initialize the candles.