



# Lumix

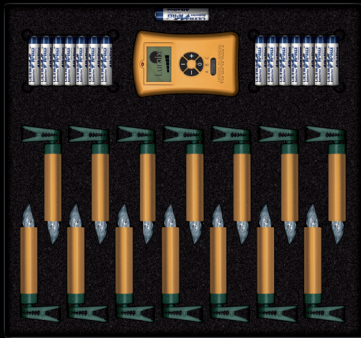

## Content Starter Set

14 LED candles  
1 IR remote control

16 high-quality alkaline LR03 / AAA batteries

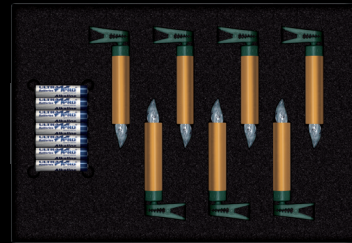

## Content Extension Set

7 LED candles  
without remote control

7 high-quality alkaline LR 03 / AAA batteries

## Technical Data

- Version IR 1.2 with Infrared technology
- Candles will burn for 14 days when used approx. 4 hrs/day with fresh batteries
- Weight of each candle including battery: approx. 20 g
- Length of candle including clip: approx. 9 cm
- Candle diameter: approx. 1.5 cm
- Range of the remote control depends on the site conditions and the battery strength
- Candle batteries: Micro type LR03 / AAA – 1,5 V
- LED: risk group 0
- Protection class: III
- LED performance: 7 mW

	Serial-Nr.		Item Nr.	
	Candles	RC	Starter-Set	Ext.-Set
Gold	13203	10401	75343	75353
Silver	14203	10401	75344	75354
Cashmere	15203	10401	75345	75355
Red	16203	10401	75346	75356

## EC Conformity Declaration

Hereby KRINNER GmbH confirms, that this product satisfies the EMC-Directive 2004/108/EG. A copy of the conformity declaration can be found at the following internet address:  
<http://www.krinner.com/service/konformitaet/>

**!** Lumix version IR 1.2: This product is compatible with all Krinner Lumix products since 2011 (IR version 1.1). Sources for extensions of previous versions can be found at <http://www.krinner.com/Bezugsquellen>


## STARTER- AND EXTENSION SET USER INSTRUCTIONS DELUXE mini



# KRINNER

KRINNER GmbH · Passauer Str. 55 · 94342 Straßkirchen · Germany · [www.krinner.com](http://www.krinner.com)

## Safety

- Lumix is not a toy. Supervise your children at all times while using these wireless Christmas candles!
- Lumix is for indoor use only!
- The existing LEDs cannot be changed!
- Use only high-quality alkaline batteries of the same type LR03/AAA – 1,5V for the candles and the remote control!
- Do not throw away batteries. Recycle them! 
- Do not recharge or short-circuit the batteries!
- Do not throw batteries into water or fire!
- Make sure to mount the batteries correctly by inserting the positive pole first!
- For storage remove all batteries!
- Altering the product will void your warranty!
- Keep your tree away from fireplaces, heaters and all other open flames!

## Important Notice

Please insert the batteries just before the candles are actually used. The candles will use energy in standby mode (switched off).

The remote control sends its signal as long as you press each switch. If candles have not responded, continue to press the respective on/off switch and, if necessary, point the remote control in the direction of the candles.

When pressing the power off button, the candles as well as the remote control will be switched off. To change the brightness level, turn on the candles first, then choose the brightness level by pushing +/- buttons.


If one or more extension sets are used you do not need an additional remote control. The remote control works with as many candles as desired.

## Use And Care






- Make sure to clip the candles securely to the branches so they cannot fall off!
- Clean the set with a lightly dampened cloth only. Do not use strong cleaners.

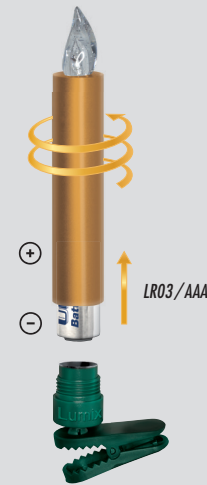
### Using the candles

1. Hold the green clip (bottom) firmly  
– Open the candle body by twisting it counter clockwise.
2. Insert AAA battery into the opened candle  
– Ensure correct polarity!
3. To close the candle put the green clip into the open end and turn clockwise.




### Using the remote control (comes with Starter-Set only)

4. The candle will begin to light  
– act with all candles of the set.
5. Open battery compartment on the bottom side of the remote control
6. Put in 2 AAA batteries (ensure correct polarity!), close battery compartment.
7. Select the channel   
Select the channel (A, B or C), with which you want to operate the candles.
8. OFF Switch   
Press the OFF switch at the remote control until all candles have been switched off. The red flashing LED indicates the function of the remote control.
9. ON Switch   
Press the ON switch on the remote control while all candles have been switched on. The red flashing LED indicates the function of the remote control.
10. Regulate brightness   
Adjust the brightness by pressing the buttons „+“ or „-“.
11. Flicker-mode activation  x2  
To use the flicker mode, double-click the ON switch „I“ (two times in quick succession). To get back to the continuous light, press the ON switch „I“ once.

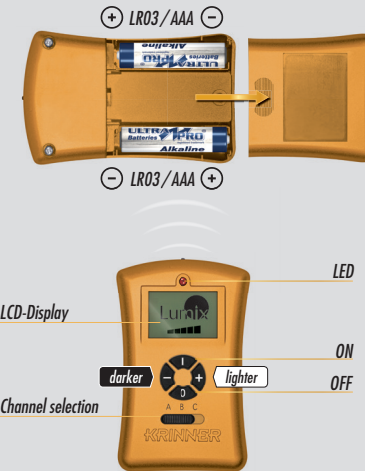

#### LCD Display

The 5 bars are indicating the current selected brightness level. The remote control will switch to standby mode after a short time automatically, to save power.

 If you should want to reset your candles reopen the battery compartment of each candle. Afterwards you can choose another channel for your candles as described above.

## Troubleshooting

- A** All or some candles do not react to your remote control:
- Check batteries for correct mounting in remote control and candles.
  - All candles must be lit when equipped with battery.
  - Does the red LED on remote control flash when pushing a switch? (If not, please check batteries inside)
- B** Some candles start to flash ON/OFF for 2 seconds:
- The battery power inside the candles is too low. Please change the battery.
  - Please mount batteries just before you decorate your tree. The candles will use energy in stand-by mode.
- C** During operation, some or all candles are no longer responding to the remote control:
- Press Power On or Off button continuously until candles respond.
  - Is the distance between the remote control and candles too far? With decreasing power of the batteries in the candles, the distance between remote control and candles must be shortened.
  - Based on local circumstances, it may be necessary to move the remote control towards the unresponsive candle.
  - Reset nonresponsive candles if necessary. The affected candle must be opened and closed again (The battery contact must be interrupted). Press the OFF/ON switch again to initialize the candles.
- D** All Lumix versions since 2011 (IR version 1.1) are compatible to each other:
- All candles can be switched on and off with all compatible Lumix remote controls.
  - Additional functions (like flicker mode) are not retrievable at previous versions.