

KRINNER

The Better Tree Stand

USER INSTRUCTIONS CHRISTMAS TREE GENIE M & XXL DELUXE



READ BELOW INFORMATION CAREFULLY BEFORE USING THE CHRISTMAS TREE STAND.









ONLY USE THE KRINNER CHRISTMAS TREE STAND AS IT IS DESCRIBED IN THE FOLLOWING USER INSTRUCTIONS.
KRINNER STANDS ARE FOR NATURALLY GROWN TREES ONLY.

To prevent floor damage due to possible leakage, please check water reservoir for cracks and holes yearly before tree setup.

SAFETY

- 1.** Do not use the tree stand for any other purpose like sign plates, clothes dryers, flag poles or sunshades etc. KRINNER will not cover any damage done by misuse of this Christmas tree stand. This Christmas tree stand is for indoor use only.
- 2.** Before putting up your Christmas tree, ensure that your tree stand has a secure base. A thick carpet is not a secure base! Only use the tree stand on a solid, level and even surface. Uneven or inclined surfaces cause reduced stability and enhance the risk of the tree to fall.
- 3.** While pushing down the foot lever with your feet, ensure that there are no hands or other body parts in between the clamps and the trunk as it can cause serious injuries by squeezing. Watch your children! The Christmas tree stand is not a toy! Do not allow children to operate or use it.
- 4.** This Krinner Christmas tree stand is a safety product. Do not alter the construction of the Krinner Christmas tree stand. **THIS WILL VOID WARRANTY:** also do not use the Krinner Christmas tree stand if it shows any damage.
- 5.** If electric lighting is used, do not allow this electric lighting to burn unattended. Caution! Water is a conductor. Ensure that electric wires are in a safe distance to the water tank of the Christmas tree stand.
- 6.** A fresh and green Christmas tree not only looks better but also reduces the fire hazard. The trunk must have a fresh, clean and even cut to absorb water. Therefore always keep sufficient water in the tree stand. Only fill in tap water.
- 7.** Caution! Adding too much water will lead to overflowing and may cause damage to the surface underneath. For the correct filling strictly follow the instructions under chapter 'filling the Christmas tree stand with water.'
- 8.** Keep your tree away from fireplaces and open flames.
- 9.** Ensure that the tree is securely fastened, well balanced and positioned in the middle of the tree stand before applying decorations and lighting.

IMAGES

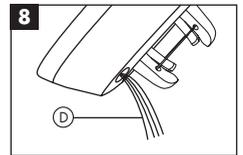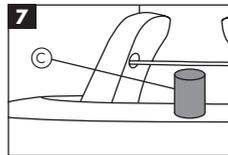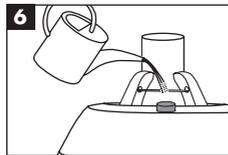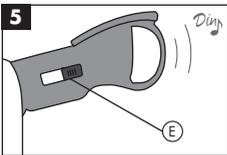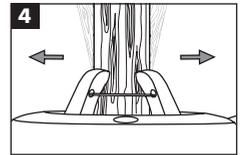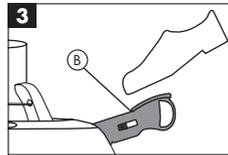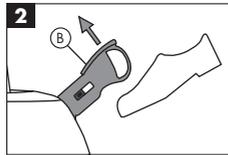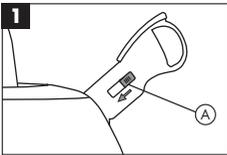

| Technical Data | KRINNER TREE GENIE M | KRINNER TREE GENIE XXL Deluxe |
|--------------------|----------------------|-------------------------------|
| Max tree height | 7 Ft. / 2.20 m | 12 Ft. / 3.60 m |
| Max trunk diameter | 4.7" / 12.0 cm | 7" / 17.0 cm |
| Weight | 13 lbs / 6.0 kg | 18 lbs / 8.0 kg |
| Diameter | 15.4" / 39.0 cm | 20" / 52.0 cm |
| Height | 4.8" / 12.0 cm | 4.8" / 12.0 cm |
| Water capacity | 1.2 gal. / 4.5 l | 2.5 gal. / 11 l |
| Warranty | 3 Years | 5 Years |

OPENING AND PREPARATION OF THE CHRISTMAS TREE STAND



CAUTION: To prevent possible damage to your carpet or floor, the use of a heavy plastic sheet underneath the Christmas tree stand is recommended. Always place the Christmas tree stand on a flat, even surface.

You receive Your Christmas tree stand closed and the red foot pedal lock **(A)** (fig. 1) in secured position. To release the Christmas tree stand, first slide the red foot pedal lock **(A)** (fig. 1) into the green unlocked position. Lift the foot pedal **(B)** (fig. 2) upwards several times to open the clamping mechanism. The clamps will open step by step. **CAUTION:** The foot pedal must be lifted with suitable foot wear. To avoid injury do not place any body parts (fingers) in area of the clamps.



CAUTION: The trunk must have an even cut and may not be drilled in the middle. If the cut is inclined or the trunk is drilled, re-cutting the trunk is necessary. An uneven or inclined cut causes reduced stability and enhances the risk of the tree to fall.

PUTTING UP THE TREE

Set the trunk of the tree into the middle of your Christmas tree stand onto the spike. Do not use a trunk that has a drilled hole in the middle.

Pump the foot pedal several times **(B)** (fig. 3) with your foot (wear suitable footwear) until you feel firm contact of the claws to the trunk. This preliminary setting allows the tree to stand by itself without any danger of tilting while permitting fine adjustment to be made. Step back and check if your tree is standing straight and adjust if necessary.

SECURING THE CHRISTMAS TREE STAND

Pump the foot pedal until you hear the 'DING' of the bell inside the foot pedal. The claws now have optimal contact to the trunk and the tree stand is now secured.

FILLING THE CHRISTMAS TREE STAND WITH WATER

After having securely anchored the tree in the stand, add water to keep your tree fresh. Always keep the inner container filled with tap water. Slowly fill with tap water (fig. 6) until the level indicator **(D)** (fig. 7) is well visible. Stop adding water. Overfilling can damage the seal and create recurrent leaking, and may cause damage to your floor covering.

TAKING OUT THE TREE

To take out the Christmas tree slide the lock **(A)** (fig. 1) into the green unlocked position. Before lifting the foot pedal **(B)** (fig. 2) several times ensure that you are holding the tree in an upright position. When lifting the foot pedal **(B)** (fig. 2) the clamps will open step by step into the vertical position. Now you can take out the Christmas tree.



CAUTION: The foot pedal must be lifted with suitable foot wear. To avoid injury do not place any body parts (fingers) in area of the clamps. Watch your children!

DRAINING AND CLEANING THE CHRISTMAS TREE STAND AFTER USE

To drain the stand after having removed your Christmas tree, tip the stand towards the opening at the level indicator into a sink. Residual Water remaining in the stand will eventually dry out by itself. After use, wash the inside and outside of the stand with a soft cloth or sponge and a mild detergent. Rinse thoroughly **(D)** (fig. 8). Do not use any chemicals or abrasive cleaners. Dry completely prior to storage. Push down the foot pedal and put the red lock back into secured position.

STORAGE (TREE GENIE M)

Pump the pedal with your hand and as the claws begin to come into the closed position, push down on 2 claws so that the other 2 claws can fold in on top of the 2 other. Press the button (this is the bell mechanism) on the underside of the foot pedal when claws have come to a closed position (you will be able to reach this button when pedal is at middle or upper position rather than it's lowest position), this engages the automatic lock. You can then press the pedal into horizontal position for storage in the box.

WARRANTY

Krinner warrants this Product to be free from defects in material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of three (3) (M Deluxe) & five (5) (XXL Deluxe) years.

WHAT WE WILL DO

If, during the warranty period, this product fails to operate under normal use and service, due to improper materials or workmanship, Krinner authorized distributors or authorised service partners will, at its option, replace the product in accordance with the terms and conditions stipulated herein.

CONDITIONS

- 1.** In order to obtain service under this limited warranty, the owner is responsible for shipping and handling fees for replacement stands.
- 2.** The warranty is valid only if the original receipt by the dealer, specifying the date of purchase is presented with the product to be replaced. Krinner reserves the right to refuse warranty services if this information has been removed or changed after the original purchase of the product from the dealer.
- 3.** If Krinner replaces the product, the replaced product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair, whichever is longer.
- 4.** This warranty does not cover any failure of the product due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with Krinner's USER INSTRUCTIONS, accident, acts of God and use of unauthorized parts or attachments.
- 5.** This warranty does not cover product failures due to repair installations, modifications or improper service performed by a non Krinner authorized service workshop or opening of the product by non Krinner authorized persons.
- 6.** This warranty is void if the Christmas Tree Genie™ by Krinner is structurally altered.
- 7.** There are no other express warranties, whether written or oral, other than this printed limited warranty. Any and all implied warranties or merchantability or fitness for the prescribed purpose, are limited to the duration of this limited warranty. In no event shall Krinner be liable for incidental or consequential damages of any nature whatsoever, including but not limited to lost profits or commercial loss. To the full extent those damages are disclaimed by law. Some states do not allow the exclusion or limitation of incidental or consequential damage, or limitation of duration of implied warranties, so the preceding limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which may vary from state to state.